

영이 #1차 다정별.

JM 8/19

K★STAR Pump Vacuum Holder

Thank you for choosing Kum Sung Diamond products. Please consult this manual before using the products.

1

Introduction

1. These models are designed to handle glass and non-porous surface materials.
2. The auxiliary handle gives an enhanced grip for better performance.
3. The red o-ring shows that the vacuum is in good condition.



Model : RP-207S
For pattern & flat surfaces
Pad Size : 8" (Ø207mm)
Weight : 1.25 kg




Model : RP-808S
For curved & flat surfaces
Pad Size : 10" (Ø236mm)
Weight : 1.35 kg

Checklist before use

Please check the following before use:

1. The shape of the rubber pad.
2. Any scratches and/or foreign substances on the surface of the rubber pad.
3. The vacuum pump is working smoothly.
4. The bolts on the handle and the auxiliary handle.
5. Dust and oil have to be cleaned from the surface of the object.

Parts List

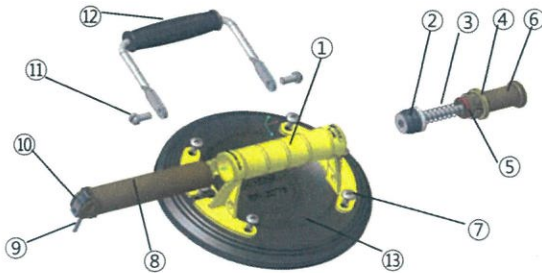

① Handle	⑥ Plunger	⑪ Auxiliary Handle Bolt
② Pump O-ring	⑦ Pad Bolt	⑫ Auxiliary Handle
③ Pump Spring	⑧ Pump Cylinder	⑬ Rubber Pad
④ Pump Bushing	⑨ Air Pipe	
⑤ Red O-ring	⑩ Releasing Button	

How to use

1. Clean the rubber pad and the surface of the object by using a clean rug.
2. Press the rubber pad against the surface of the object and begin pumping until the red o-ring remains inside the handle.
3. To release, push the releasing button.
4. After use, keep the product in the box.

Precautions

1. The products are designed for manual purpose only.
2. Dropping the product may cause a malfunction.
3. Do not use solvent or thinner on the pump o-ring.
4. Apply an adequate amount of lubricating oil to the pump o-ring once a month.
5. Do not use if red o-ring is visible.
6. Do not press the releasing button while in use.
7. Use of parts other than the specified ones are prohibited.

Replacement Parts

Part Name	Rubber Pad	Pump	Pump & Handle Set
Model	RP-6050	SJ-6090	SJ-815
Image	 ø8" RP-207S ø10" RP-808S		

Maintenance

Rubber pad/Handle replacement		Pump Set Replacement	
①	 Loosen the pad bolt and replace the rubber pad.	①	 Put the tool into the pump bushing hole and turn it counterclockwise to disassemble.
②	 The air pipe must be inserted into the rubber pad hole.	②	 Dismantle the bushing and remove the pump.
③	 The red O-ring should not be visible while in use.		

Rubber pad & pump maintenance

 Clean the pad surface.	 Remove dust in the grooves around the pad rim with a soft brush.	 Wipe the pump o-ring with a soft cloth and apply grease.
----------------------------	--	--

K★STAR KUM SUNG DIAMOND CO., LTD.

103, Namdongdong-ro 138beon-gil, Namdong-gu, Incheon (98 Block, 7 Lot)
TEL : 82-32-812-9933 / FAX : 82-32-812-4090
E-mail : kstar@kstar.co.kr www.kstar.co.kr

5

영이 #1차 다정별